

ELECTRONIC SALT WATER DOSING PUMP (34315)

- The display indicates pulses per minute.
- Each pulse is 1.5 ml.
- The indicated dosage would be 4 pulses per tonne of production.

PROD. TN/24H	DOSIF.SALM. Lt/h	PULSES
1	0,35	4
2	0,69	8
3	1,04	12
5	1,74	20
10	3,47	40
15	5,21	60
25	8,68	100
50	17,36	200



ELECTRONIC SALT WATER DOSING PUMP INSTALLATION

The pictures show you how to install the saltwater dosing pump.



1. As shown in the picture: Fix the salt water dosing pump on the cover of the fresh water pump then parallel connected (multiple) the salt water dosing Pump wire to the fresh water pump wire and let both pumps operate together.
2. You will need to use a plastic container to keep the salt water. The ratios are as follows: the salt and the water is 3/100, and the salt water and the fresh water is 5-10/1000.
3. Use one plastic tube to connect the inlet slat water suction point of the salt water dosing pump with the plastic container and use another plastic tube to connect the outlet slat water spray point of the salt water dosing pump with the fresh water tank.