ITV | ICE makers


Whipped cream monthly cleaning









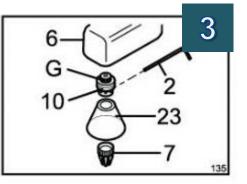

Frontal view of the whipped cream unit.

- 1. Turn 45 degrees clockwise the white piece where the cream exits.
- 2. Extract the metallic tube.
- 3. Dismantle the cream suplir, turning it clockwise and clean.






View of the inside of the unit (cream bin).

- 4. Dismantle the extruder pin.
- 5. Dismantle the extruder axe by pulling it.
- 6. Dismantle the pipe that goes inside the liquid cream bin.



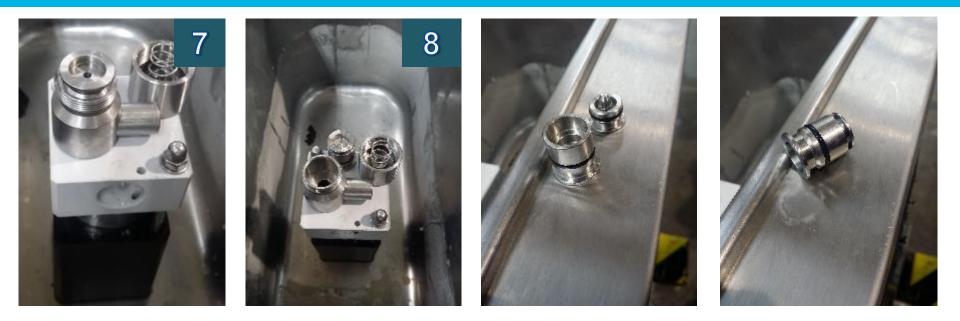


7. Dismantle the air regulator pulling it upwards. Remove the regulator switch turning it counter clockwise.

8. Dismantle the interior of the valve pulling upwards.

Last picture shows the valve dismantled.



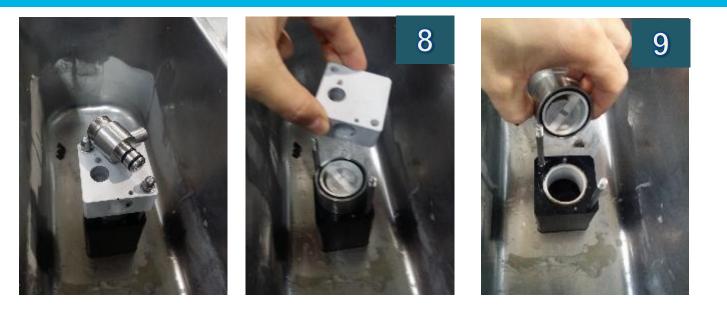

View of the inside of the unit (cream bin).

- 9. Dismantle the pump body, first of all unscrew the two screws, and lift the grey body.
- 10. Dismantle the round pump body to clean.



Every element must be cleaned carefully using hot water and detergent, and rinsed with water.

Note: We advise to leave all the elements under water for a few hours with detergent (like for example during the closing hours) to get rid of all the cream.

Assemble all the elements back into their original positions.


PLEASE WHEN PUTTING THE GREY SQUARE BODY IN PLACE, TIGHT THE SCREWS. IT MUST BE TIGHT ENOUGH TO AVOID THE LIQUID CREAM FLOWING DOWN INTO THE PUMP BODY AND LEAVING THROGHOUT THE CREAM DRAIN TUBE (UNDER THE UNIT)





Cleaning the elements in contact with the cream (suction tube, pump body, extruder, tap, nozzle):

- Put the liquid cream in the refrigerator.
- Put some detergent in the cream bin, with warm water.
- Turn on the unit until and extract all the water with detergent (press the cream button).
- Repeat using more water, no detergent, to rinse the circuit.
- If the solution must remain in the bin for a long time, please disconnect the unit so it won't make the refrigeration system to work.

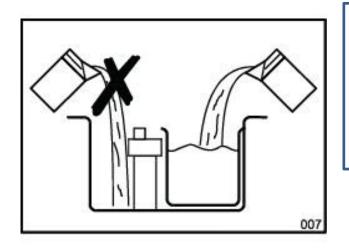

During the washing step the pump can be working constantly, but always with water in the cream bin. The unit should not work without liquid to prevent damaging the pump.





Pol.Ind. Sector 13. Avda. dels Hostalers, 2. 46394 Ribarroja del Turia, Valencia (Spain) itv@itv.es• www.itv.es