
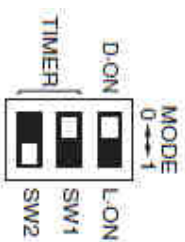



# Kit external stop (c.5275)

LED collector position

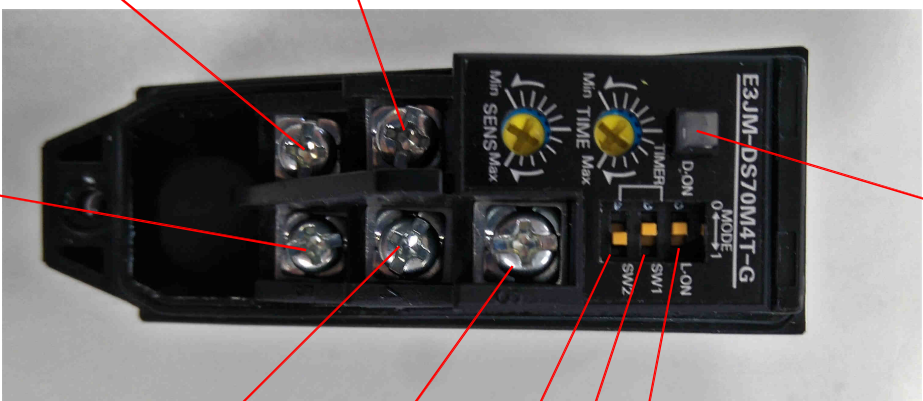

Position D-ON  
 SW1 position 0 (left)  
 SW2 position 1 (right)

- Set the Dip-Switch as shown in the picture.
- Adjust the TIME delay to the minimum, counterclockwise until tighten.
- Adjust the on/off distance with the SENS selector:
  - Place an object to the desire stop position (min 20 cm).
  - If the sensor does no detect the object (LED ON):
    - Turn clockwise the SENS selector until the LED turns off.
    - Turn counterclockwise the SENS selector, slowly, until the LED turns on.
    - Turn clockwise the SENS selector until the LED turns on.
  - Remove the object.
  - Adjust the TIME delay two marks from the MIN, clockwise.

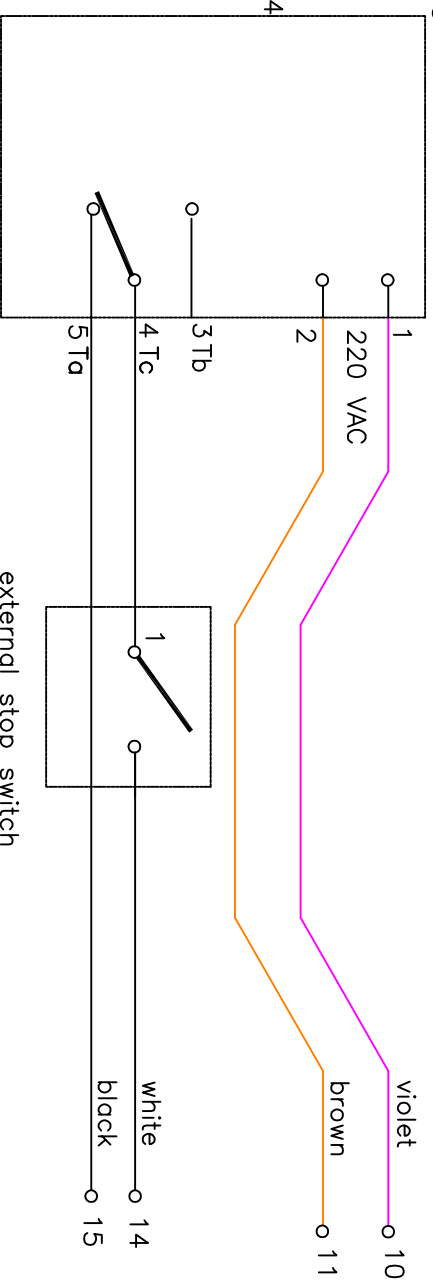

Connect remote photocell

Remove the jumped and connect the white wire to "14" and the black to "15"

Photocell Omron  
 E3JM-DS70M4T-G  
 (C.30991)

external stop switch  
 (C.1970)