


IQ-400-550 / R404A/ trifásica esquema eléctrico - wiring diagram

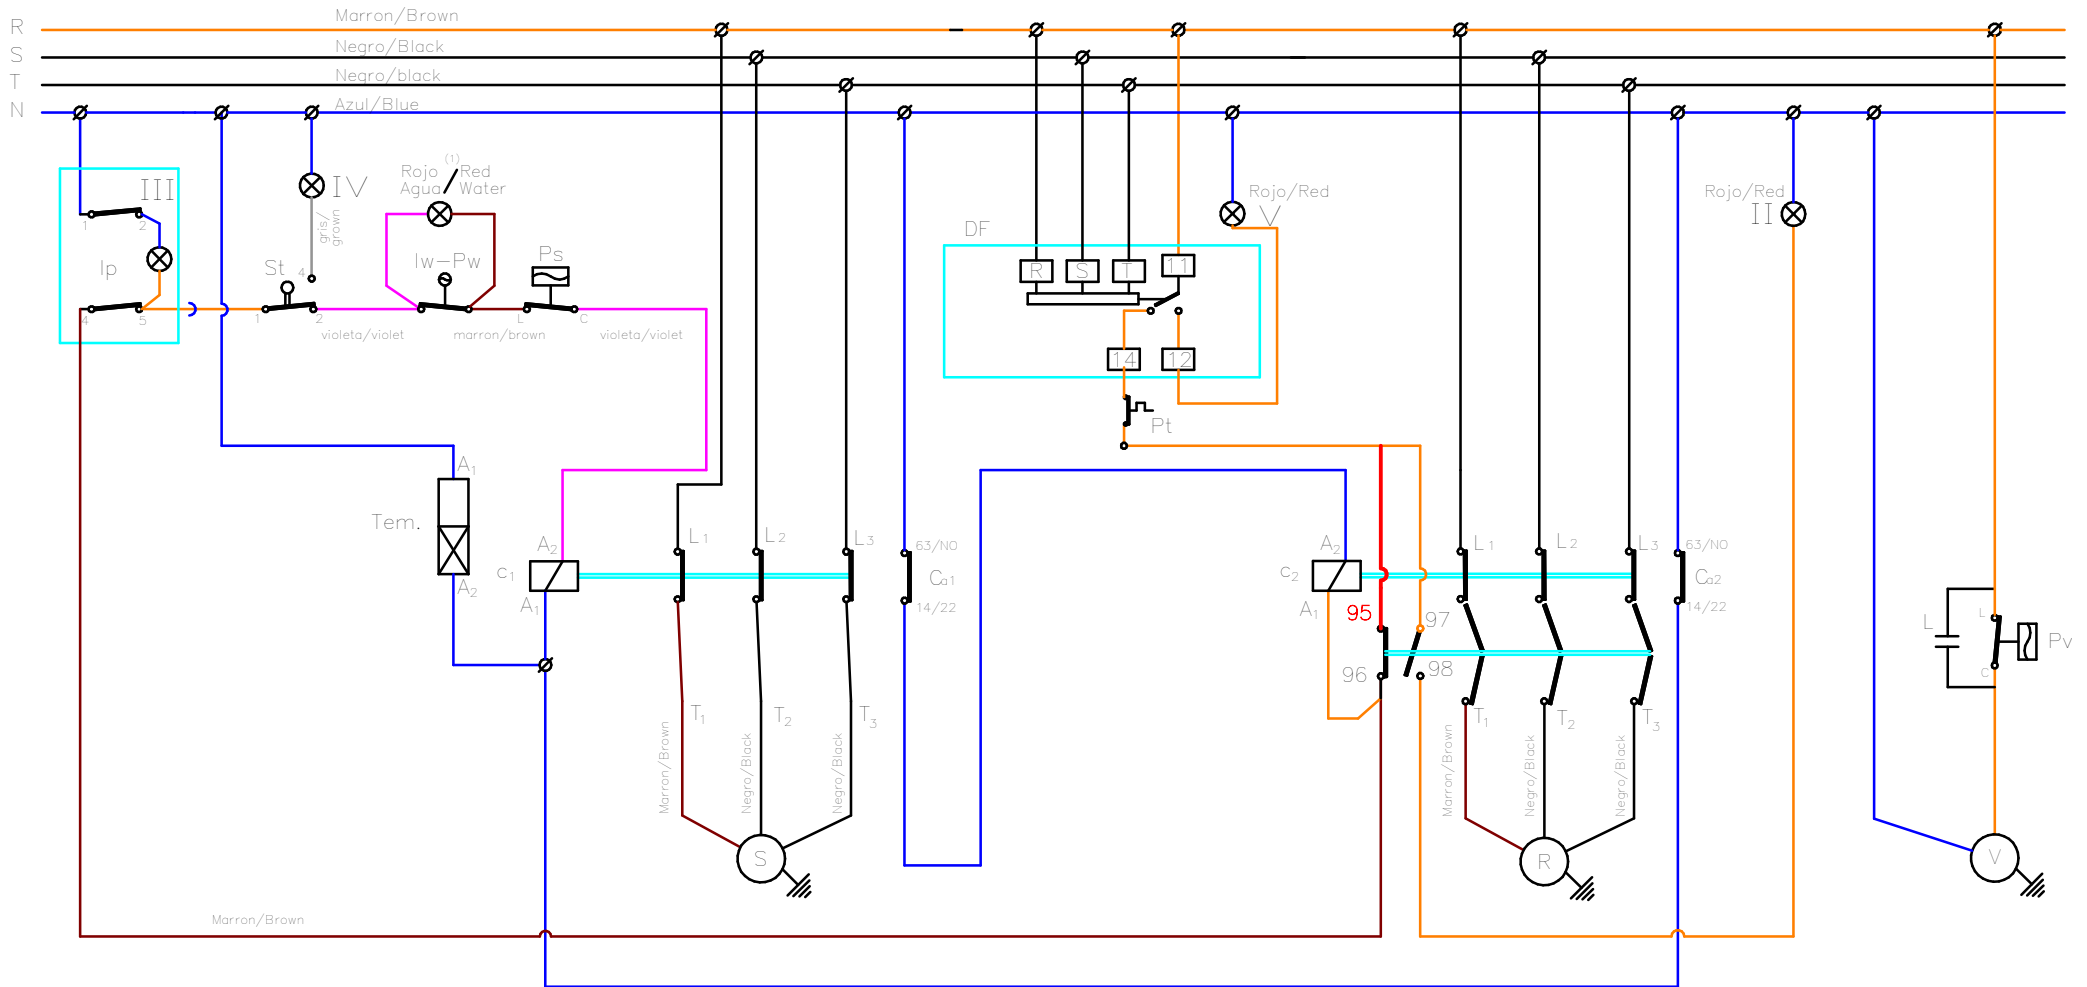

Tem.-Temporizador a la conexion/Start Timer

- c₁ -Contactor (Compresor)/Contact (Compressor)
- c₂ -Contactor (Motorreductor)/Contact (gearmotor)
- Pv -Presostato ventilador (solo cond.por aire)/Fan Pressostat (only air cooled models)
- V. -Ventilador/Fan
- S. -Compresor/Compressor
- Ip. -Interruptor de paro-marcha/On-off switch
- St. -Paro por llenado/Full storage bin stop
- lw. -Micro boya falta de agua/Water low level float switch
- Pw. -Presostato de agua/Water pressostat
- Ps. -Presostato de seguridad/High pressure safety pressostat
- R. -Motoreductor/Gearmotor
- L. -Condensador filtro/Electrical interference filter (capacitador)

Pt. -Protector térmico motor/Motor thermal protection

DF. -Detector de fase/Phase sequence relay

Ca₁ -Contacto auxiliar autoalimentacion/Auxiliar contact feedback

Ca₂ -Contacto auxiliar autoalimentacion/Auxiliar contact feedback

II -Termico Motorreductor/Thermic gearmotor

III -Azul linea / Blue on

IV -Ambar llenado/ Yellow full

V -Fase cambia/Phase sequence

REGULACION TERMICOS OVERLOAD SETTING	
COMPRESOR	3.6 A
MOTORREDUCTOR	1.3 A